# ASSEMBLY MANUAL

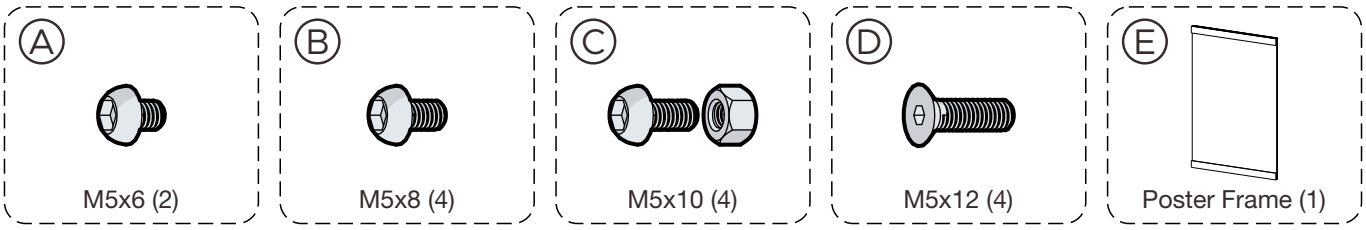


## ASSEMBLE BASE & POLE

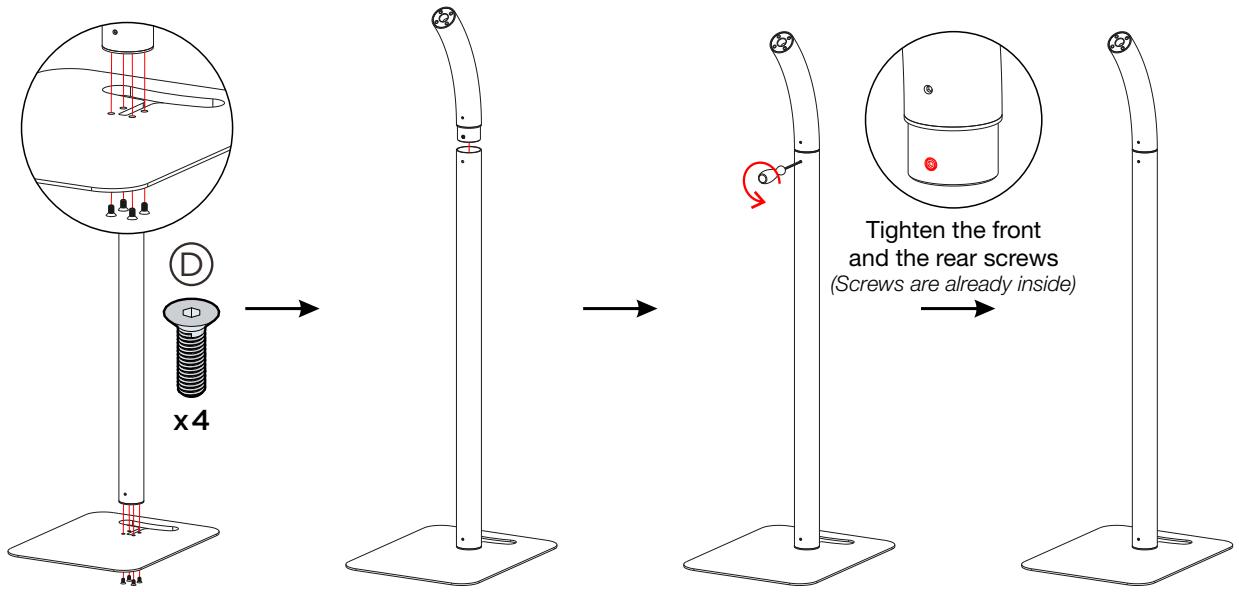


## MOUNT POSTER AND TABLET

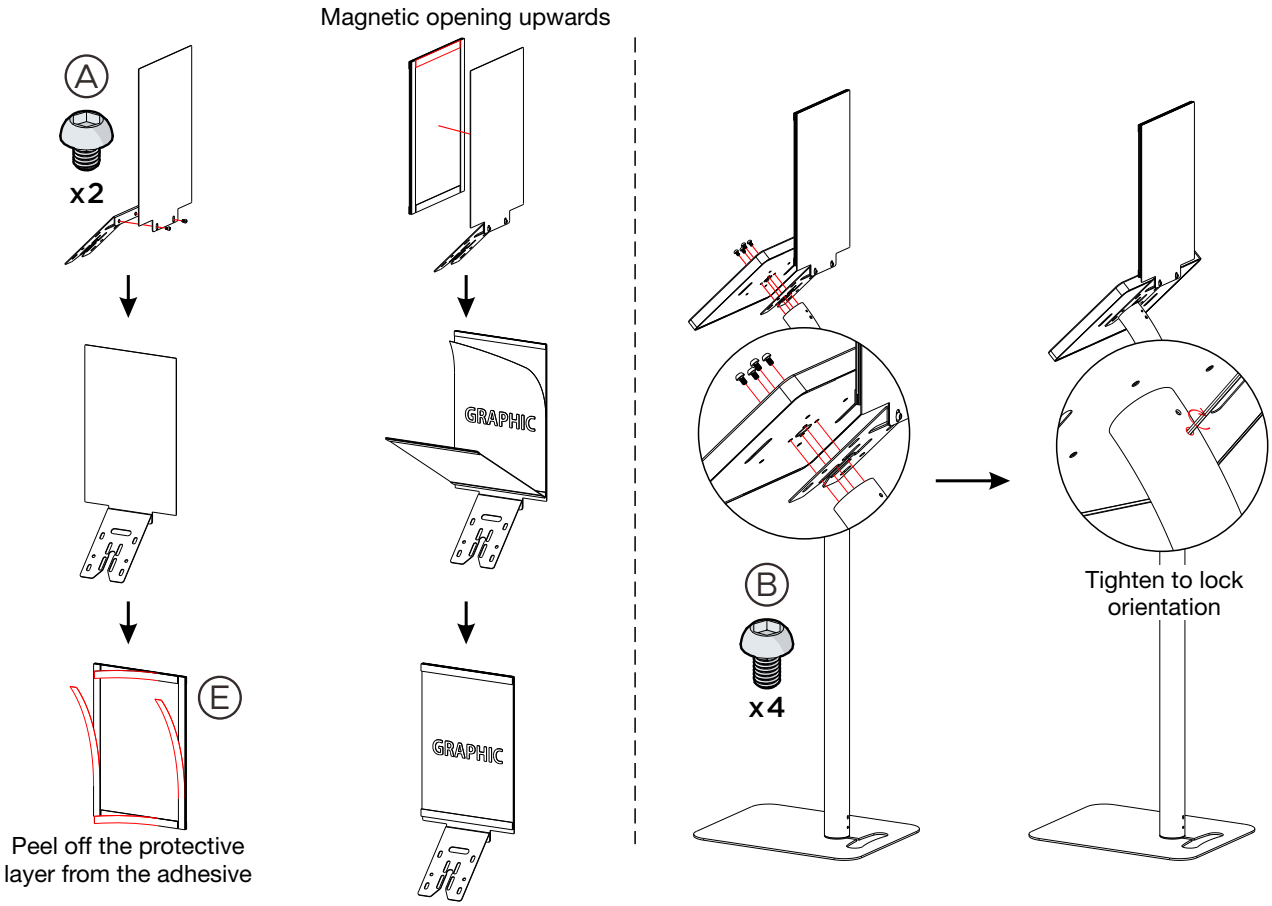

## ADD CHARGE CABLE AND PLACE TABLET

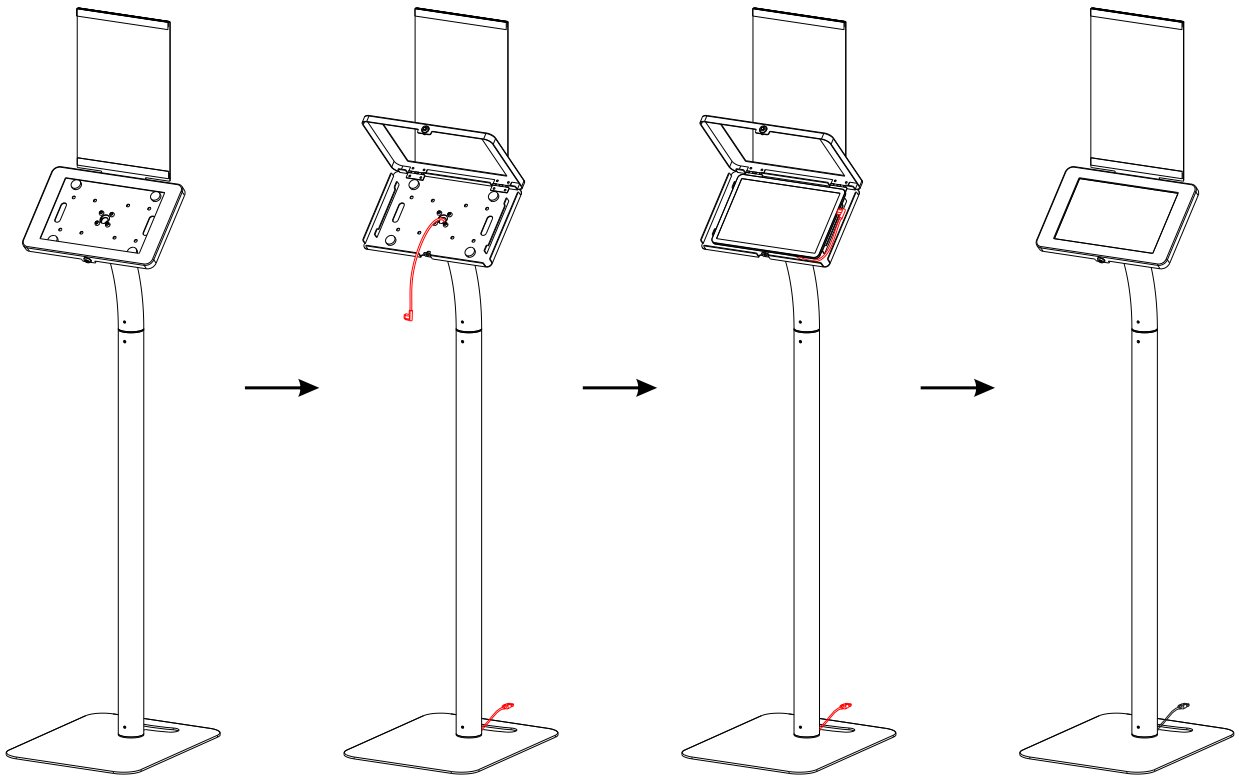

## LOCK TABLET IN PLACE

LOCK

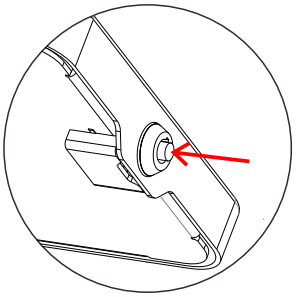

Push to lock

UNLOCK

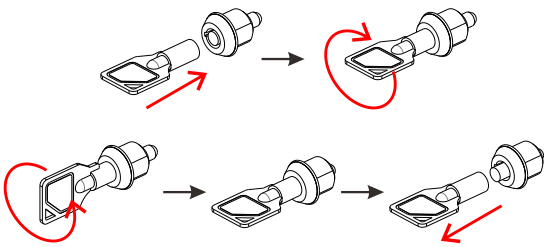

To remove the key when unlocking, turn back to entry position.
*(The key can not be removed in other positions)*

For further assistance on how to set up and use the donation box please visit support.churchdesk.com